

MARISHILL - JUNE 2017

M

MORRISONS

## Ceramic Steam Iron



User manual

Model number: WMIRCER003

Please read these instructions carefully and keep them for future reference.

## Contents

Unpacking your steam iron .....	2
Safety instructions.....	3
Feature diagram.....	5
Using your steam iron.....	6
Self cleaning and storage.....	10
Cleaning and care.....	11
Connection to the mains supply.....	12
Guarantee.....	13

## Contents

Unpacking your steam iron .....	2
Safety instructions.....	3
Feature diagram.....	5
Using your steam iron.....	6
Self cleaning and storage.....	10
Cleaning and care.....	11
Connection to the mains supply.....	12
Guarantee.....	13

## Unpacking your Steam Iron

### Before you use your Steam Iron

1. Remove all the packaging.
2. Check the Steam Iron after unpacking for any visual damage such as:
  - Misaligned or damaged cabinet parts
  - Damage to the soleplate assembly
  - Damage to the plug or cable
  - If you can see any damage **do not use the steam iron**

The steam iron should not be used if it has been dropped, if there are visible signs of damage or it is leaking.

This steam iron must be put on a stable ironing board, away from walls and cabinets. When placing the Steam Iron on its stand, ensure that the surface on which it is placed is stable.

The steam iron must be placed away from high temperatures.

## Safety instructions

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- The appliance must not be left unattended while it connected to the mains supply.
- Do not touch hot surfaces.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Do not let the cord hang over the edge of the worktop or touch hot surfaces.
- Unplug from the mains outlet when filling with water, emptying the water tank, before cleaning and when not in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments not recommended by the appliance manufacture may cause fire, electric shock or injury.
- This appliance must not be immersed in water.

## Safety instructions

- Never remove parts from the appliance, such as the feet, screws and so on.
- Avoid contact with steam from the Steam Iron while in use or just after it has switched off.
- Never overfill the Steam Iron. If overfilled, water may leak. Always take care to pour the water slowly and carefully when filling.
- Do not operate this appliance for anything other than its intended use.

**This product is intended for household use only** .Do not use outdoors.


This product is only intended for ironing fabrics.

**Warning:** it is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.

**Warning:** children should not use this appliance. Close supervision is necessary when any appliances are used near children.



**Warning:** this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervisions or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.

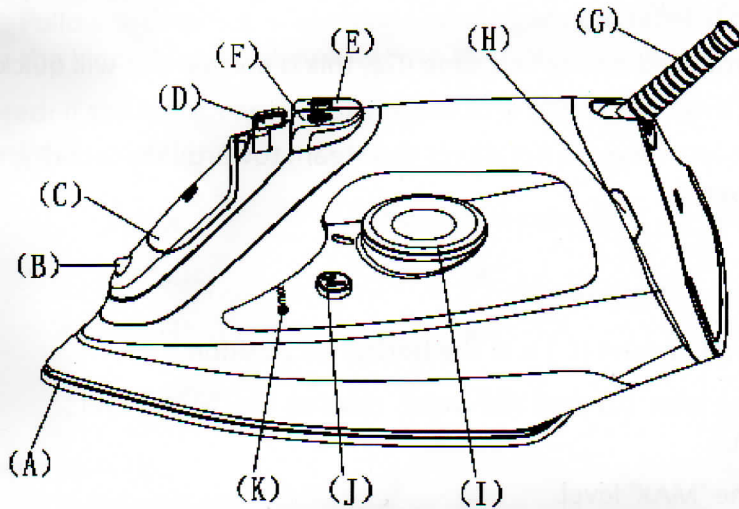
## Feature diagram




A Ceramic soleplate      B. Spray nozzle

C. Water filling inlet

D. Steam control (ON  /OFF  )

E. Spray button 

F. Burst of steam button 

G. Power cord protector

H. Pilot light    I. Temperature control

J. Self clean button    K. MAX water level

## Using your Steam Iron

### Before first use

- A small amount of smoke may be produced during first time use, this is normal and will quickly disappear.
- When using the steam function for the first time, do not direct the steam towards the laundry, so there could be debris from the steam vents.

### Filling with water

- Make sure that the Steam control (D) is in off status.
- Hold the steam iron so that the Water filling inlet (C) is in the horizontal position.
- Fill with water through the Water filling inlet (C) until the water reaches the 'MAX' level, indicated on the side of the steam iron.

**Warning:** never fill the steam iron above the 'MAX' level.

- Insert the mains plug into a suitable 13 Amp mains socket.



## Using your Steam Iron

### Setting the temperature

- Follow the ironing instructions on the garment label. If there are no instructions but you do know the kind of fabric, please refer to the following table.

**Noted:** If the fabric consists of various kind of fabrics, always select the temperature required by the most delicate fabrics.

Fabric	Temperature control	Temperature requirement
Synthetic	●	Low temperature
Wool	●●	Medium temperature
Cotton, Linen	●●●	High temperature

### Steam Ironing

- Place the iron in a vertical position and select the temperature at the minimum heat setting.
- Insert plug into the mains socket and press the temperature control button (I) until your desired setting is displayed in the temperature control panel. A blinking light under the desired setting indicates that the iron is heating up.

## Using your Steam Iron

- When the light under the desired setting has stopped flashing, the iron is ready to be used.

**Caution:** Attempting to steam iron on a lower temperature setting or failing to allow the iron to reach selected temperature can result in hot water dripping from the soleplate.

- Adjust the Steam control (D) to the required position.
- Steam is produced as soon as the iron is held horizontally.

**Caution:** when you have finished using the steam setting, position the Steam control (D) to the 'OFF'



position or water may drip from the soleplate when stored or used on lower temperature settings.

### Spraying

Press the spray button (E) to spray water onto clothes, as often as required.

**Caution:** when using the water spray function, ensure that there is enough water in the water tank. You may have to press the spray button several times during first use in order to start the spray function.


## Using your Steam Iron

### Burst or vertical steam ironing

- Press the burst of steam button (F) to generate a powerful burst of steam that can penetrate the fabric and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.
- By pressing the burst of steam button at intervals you can also iron vertically. This can be used to iron items such as --- curtains, hung garments, etc.

**Note:** the burst steam function can only be used at high temperature and will not work effectively when temperature setting is blinking. Do not press the burst of steam button again until the soleplate has reached the temperature.


### Dry ironing

For ironing without steam, follow the instructions in the section -----‘steam ironing’, however, the steam control should remain in ‘OFF’(no steam  ) position.

## Self cleaning and storage

### Self cleaning

The self-cleaning feature cleans inside the soleplate, removing impurities. We recommend using it every 10-15 days.

- Set the steam control to the 'OFF' (no steam  ) position.
- Fill the water tank to the maximum level.
- Set the temperature control to maximum and wait for the backlight to be solid.
- Remove the mains plug from the mains socket and press the self-cleaning button until the boiling water, steam and impurities come out.
- When the soleplate has cooled down, you can clean it with a damp cloth.

Caution: ensure the soleplate faces away from you during this process.

### Storing

After using, lift the iron with the filling hole downwards to empty the remaining water from the water tank.

- Insert the plug into the socket, and set the temperature control to 'maximum' for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing.

## Cleaning and care

### **WARNING: Electrical Shock Hazard**

Before you clean the appliance, disconnect the mains plug from the wall socket.

Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.

- Allow the steam iron to cool off before cleaning.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.

Product code: 2160798

Rated voltage: AC 220-240V ~ 50Hz


Power consumption: 2200W

## Connection to the mains supply

### WARNING- THIS APPLIANCE MUST BE EARTHED

➤ This unit is designed to operate on 230V - 50Hz only.

**Note:** As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

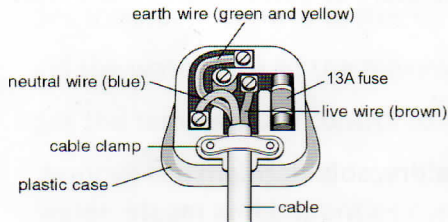

**Always ensure that the plug cord grip is fastened correctly.**



- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured blue.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured brown.
- The wire which is coloured green + yellow must be connected to the terminal which is marked with the letter E.
- A 13 Amp fuse must be fitted.

**Note:** To prevent electric shock disconnect from the mains before removing cover. No user serviceable parts inside, refer servicing to qualified service personnel.

## Guarantee

This product is guaranteed for 12 months from the original purchase date against defects caused by faulty materials or workmanship provided that it has been used and installed only for its intended domestic purpose and in accordance with the instructions provided.

This guarantee does not cover wear and tear, damage, misuse or any consumable parts.

To make a claim under the guarantee, please return the product to the store you purchased it from with the original proof of purchase.

**This does not affect your statutory rights.**

**For Customer  
Services please call  
0345 6116111  
Opening times:  
Monday – Friday  
8am until 8pm  
Saturday  
9am until 5pm**

Revision 2



This symbol is known as the 'Crossed-out wheelee bin symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility,

visit [www.morrisons.co.uk](http://www.morrisons.co.uk) or ask in store for details.

We reserve the right to possible changes to design to alter the instruction manual without prior notice.