

HARTSHILL STEAM IRON

Operation

OPERATION SUMMARY

1. Set the steam controller and temperature controller to 'OFF' position.
2. Fill the water tank through measuring cup until the water reaches the MAX.WATER level.
3. Inset the mains plug, Adjust the temperature controller to set the correct temperature for the material being ironed.
4. When the pilot light turns off, the iron is ready to use .
5. If steam is required turn the steam control to the "ON" position, steam will be produced. Turn the steam control to the off position when steam is not required.

Refer to instruction manual for more information

IMPORTANT INFORMATION BEFORE FIRST USE

You may notice water dripping from the iron, which is most likely to be caused by one of the reasons blow.

- On filling the iron with water, ensure that the water does not exceed the mark on the side of the reservoir. Where applicable ensure the filler cap has been securely replaced.
- Ensure the steam switch is set to the off position prior to turning on the iron, only turn on the steam switch when the iron is upto the required temperature and when the steam function is required. Turn the button to the off position before turning the iron off.
- The steam burst button can only be used at high temperatures, and will not work effectively until the iron is upto speed.

Refer to instruction manual for more information